




# CAN TOTE


## Assembly

## Directions

Top View Fig. A  
Box

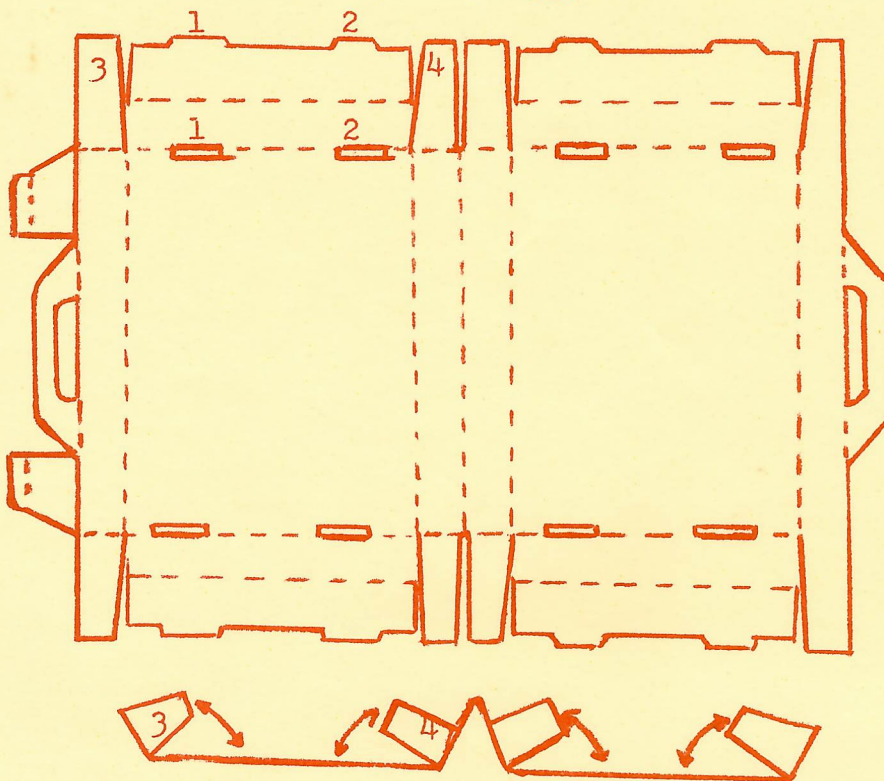

End View Fig. B  
Box




### A. Check CAN TOTE kit for following:

1. CAN TOTE Box.
2. Two sets of insert sheets (3 series of slots/holes in sheets).


### B. Box Completion:

1. Make center fold first. See Fig. B.
2. Pull center fold upward as shown in Fig. B. Box will now be divided into two sections.
3. Fold tabs 3,4 toward center of each section. See Fig. B.
4. Fold tabs 1,2 into Slots 1,2 over tabs 3,4. See Fig. A.

Fig. C



Insert

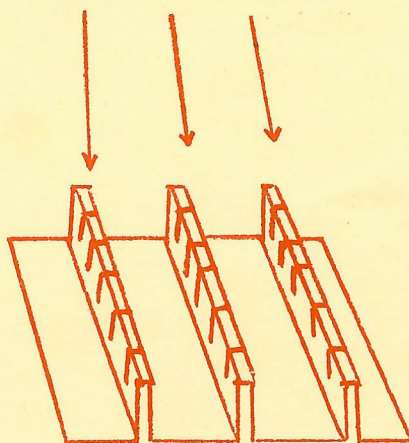

Shelf Fig. D

### C. Insert Completion:

1. Pull apart insert pieces, pull out slot/holes.
2. Fold five insert dividers on perforated lines as in Fig. C.
3. Fold shelf as shown in Fig. D.
4. Insert dividers into the five slots in shelf.

This will complete your insert and it will be ready to place in box. Complete second insert for other side of tote.

Now tote should resemble a suitcase and inserts can be placed in each section, close the tote and push tabs into slots to lock closed.

KOLLECTIBLE KONTAINER ENTERPRISES, LTD.

P. O. BOX 95284

SCHAUMBURG, ILLINOIS 60195